



Exhaust

Unit should be positioned with exhaust nozzle parallel to aisle.

or near any high heat source.

to the floor. The Airius unit should not be

mounted directly in front of heat ducts, vents



AIRIUS MOUNTING GUIDELINES - RETAIL SERIES - Model 20/EC NARROW

