

Airius Model P2 Product Information Sheet



PS2-230V

Page 1 of 2

DIMENSIONS



PROPERTIES

ZE		Standard
UNIT SIZE	Weight:	3.0 kgs
S	Height to Rim:	229 mm
	Total Height:	280 mm
	Diameter:	286 mm

)R	230V		
MOTOR	Watts* @ 50 htz:	15	
Σ	RPM* @ 50 htz:	1230	
	L/S* @ 50 htz (m3/hr):	191 (690)	
	AMPS* @ 50 htz:	0.06	
	*Motor data provided by motor manufacturer and is subject to change at anytime		

COVERAGE

• Ceiling Height = 3.5m - 4.5m (11 - 15 ft)

• Max Floor area = $60m^2$ (645 ft²)

MOTOR

- Single phase, shaded pole, single speed (variable with optional speed control), axial motor
- Sealed bearings, no lubrication required

OPERATING TEMPERATURES

• Operating Temp = -20° C (-4° F) to 70° C (158° F)

• Thermal shut off = 110°C (230°F)

• Reset = 90° C (195°F)

HOUSING

- PC/ABS Resin
- 5VA flame resistance rating
- 1.8m (6') steel safety leash cable (fastened to housing)

NOISE LEVEL

• 3 Metres = TBA

INGRESS PROTECTION

• IP55 Rated

COLOUR

- · Cool gray 2C Off white as standard
- Can be tailor painted to your colour specifications

SPEED CONTROLS

 Speed Controls - On/off speed controls allow for variable output from Airius unit. 1 AMP and 5 AMP controls available

WARRANTY

- 5 years parts and workmanship from shipping date
- 120 day money back guarantee (T's & C's apply)



Airius Model P2 Product Information Sheet

PEARL series

PS2-230V

Page 2 of 2


PLACEMENT

PREPARATION

- Install electrical circuit(s) and outlet(s) in accordance with national and local electric codes
- Outlets should generally be mounted vertically unless a "twist/locking" type is being used
- Wall switch may be installed in circuit to disable power and prevent electrical hazards when servicina
- Confirm electrical continuity of Airius unit on the ground before permanently mounting in the ceiling

INSTALLATION

- Hang vertically as high in the ceiling as possible Typically 300mm (12") - 450mm (18") from the roof deck to intake
- The Airius unit performs best when air column from the nozzle is unimpeded to the floor
- Use professionally installed hardware, capable of supporting a minimum of five times the weight
- Hardware to hang the unit includes but is not restricted to: Hooks, chains, cables, carabiners, bridle rings, beam clamps and bolts
- Density of the placement is directly related to the effectiveness, performance and savings
- Mount out of reach from people and animals
- Floor plans, mezzanines, office locations, machinery, people placement, plumbing, lighting, duct work, electrical systems, natural light/air systems, cranes, doors, windows, ventilation and fire suppression systems are all factors in properly locating the Airius system within the ceiling

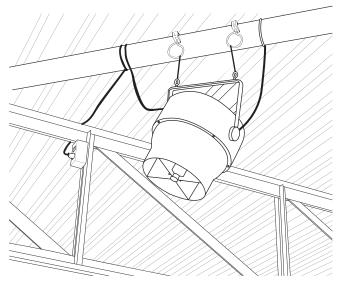

OPERATION

- Designed to operate 24 hours-a-day, 7 days-aweek to maintain thermal equalization/humidity equalization
- Use optional speed control to fine tune RPM if needed

MAINTENANCE

- Frequency of cleaning will vary by application and environment
- You may clean the plastic housing with a damp warm cloth, using mild household detergents
- Do not use petroleum products, thinners or solvents to clean any part of the Airius unit
- If the Airius unit fails, contact manufacturer











Airius LLC, © 2011. All Rights Reserved.